



*Lift Caddy*™

### **Warning**

**PLEASE READ, UNDERSTAND, FOLLOW AND SAVE THESE INSTRUCTIONS**

**Failure to follow all warnings and instructions may result in product failure, property damage, serious personal injury.**

**The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be clearly understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator to protect him or her from personal injury.**

**Never allow a Minor to operate this device.**

# Liability Waiver

It must be clearly understood by any person operating this device that it is their sole responsibility for understanding and following all instructions written within this manual to protect themselves from injury. Operator agrees to use this product solely at their own risk.

Lift Caddy shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product.

# Specifications

- Type 12V DC
- Load Capacity 250 LBS
- Material Steel
- Overall Height 36" ( 91.4 Cm)
- Travel Range 18" ( 45.7 Cm)
- Weight 28 Lbs (12.7 Kg)
- Handle Manual Crank Handle



Manual Crank Handle

Light Switch

Operating Switch

*Lift Caddy.ca*

7 Pin Plug

Remote Control

Lower Arm-To Vehicle

Safety Pin

Receiver

# Safety

- **WARNING:** Read and understand all instructions before using this device. The Operator must follow basic precautions to reduce the risk of personal injury and/ or damage to the equipment.
- Do not install or use in the presence of flammable gases, dust or liquids.
- Do not operate this device when tired or under the influence of alcohol or drugs.
- Avoid wearing loose clothing or jewelry that could become entangled with moving parts. Keep long hair covered.
- This device was designed for a specific function. Do not modify or alter this device or use it for an unintended purpose.
- **Keep your limbs and body well away from any pinch or shearing points. Failure to do so could result in serious injury.**
- **Do not exceed your bike rack's rated capacity.**
- Never move vehicle while this device is in the lowered position.
- **Caution: Always remove safety pin prior to lowering this device**
- **Always install safety pin prior to moving vehicle**
- Do not let comfort and familiarity with Lift Caddy (gained from repeated use) replace strict adherence to the safety rules. If you use this tool unsafely or incorrectly, you could suffer serious personal injury.
- Do not use the Lift Caddy if any parts are damaged or broken. Repair or replace the parts. Failure to do so may result in personal injury.
- Always protect yourself.


# Operating the Lift Caddy

- Insert Lift Caddy lower arm into vehicle hitch receiver, Secure with 5/8" hitch Pin.
- Plug Lift Caddy electrical plug into vehicle hitch plug.
- Attach your Bike Rack to Lift Caddy receiver.
- Remove safety pin.
- **Note:** Depending on how your vehicle is wired, you may need to turn your ignition to accessory position.
- **Note:** This unit is equipped with an internal circuit breaker designed to trip if the load strain is too great. Release the operating switch and wait 15 seconds for the breaker to reset before attempting again.
- Lower Lift Caddy by pushing the operating switch. Allow Lift Caddy to Lower to desired position.
- Mount Bicycle(s) onto bike rack and secure bicycle(s) to your rack.
- Raise Lift Caddy by pushing operating switch in opposite direction until Lift Caddy is fully raised.
- **Note:** The wireless remote control can also be used to Lower or raise Lift Caddy.
- Attach safety pin.
- You may have to raise the drop leg slightly to release pressure on the safety pin.

# Care and Maintenance

- Maintain the Lift Caddy with care. A tool in good condition is efficient, easier to control and will operate with fewer problems.
- Inspect the Lift Caddy periodically. Repair or replace damaged or worn components. Use only identical replacement parts when servicing.
- **Warning:** Only qualified service personnel should repair the tool. An improperly repaired unit may present a hazard to the user and/or others.
- Keep the Lift Caddy clean and dry.
- Fully extend the Lift Caddy leg and clean the inner tube periodically with a mild soap and water.
- After cleaning, coat the tube with a light grease or silicone spray lubricant.
- For technical questions contact: [www.liftcaddy.ca](http://www.liftcaddy.ca)

# Wireless Remote Control

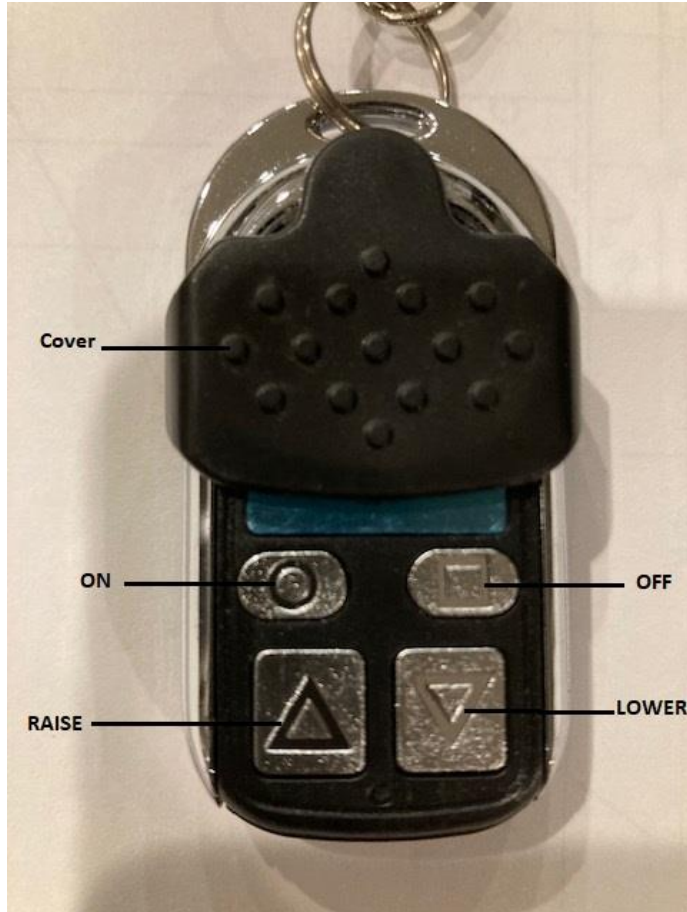

- 1) Slide COVER Up to expose control Buttons
- 2) Press the ON button to activate remote function. The indicator LED will light up when remote is active.
- 3) Press the LOWER button to LOWER the unit.
- 4) Press the RAISE button to RAISE the unit.
- 5) Press the OFF button to shut OFF the remote. The LED will become dark.
- 6) Slide COVER down to prevent accidental operation of the remote control.
- **Caution: Always remove safety pin prior to Lowering Device.**



# Operating Manual Crank

- Should you encounter power drive failure, the Manual Crank can be utilized to raise or Lower the Lift Caddy.
- 1) Disconnect power plug from vehicle. Do Not use crank when motor is powered.
- 2) Access the drive collar by removing the plastic cap on top of motor.
- 3) Insert crank handle into the drive collar.
- 4) Turn crank counterclockwise to Lower, Clockwise to Raise.
- 5) Attach safety pin when fully raised, prior to vehicle travel.
- 6) Remove crank handle from drive collar, replace plastic cap.

*Lift Caddy*™

Contact:  
Innovex Group Ltd  
[www.liftcaddy.ca](http://www.liftcaddy.ca)  
Patent Pending

# Lift Caddy™

## Limited Warranty

All Lift Caddy components manufactured and or assembled by Innovex Group Ltd. is warranted against failure due to defects in materials and workmanship under normal use for a period of 1 year from date of purchase. Specifically excluded from this warranty is product failure due to improper operation, alterations, normal wear or damage from foreign material such as: Fine debris, sand, dirt, water, ice, etc.

Warranty is limited to component repair or replacement at Lift Caddy's sole discretion.

The customer will be responsible for removing any defective item, all transportation/shipping costs, reinstallation and any/all other related expenses.

The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered.

Warranty will be void if any component is dismantled or tampered with by any unauthorized personnel.

All warranty work shall be performed by Lift Caddy authorized personnel only.

All warranty work shall be performed at the nearest Lift Caddy authorized location.

By using the Lift Caddy Product, you agree to be bound by this Limited Warranty.